




F I G. 17

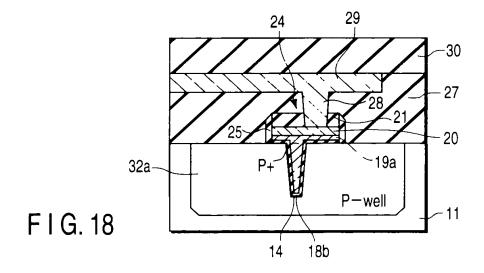

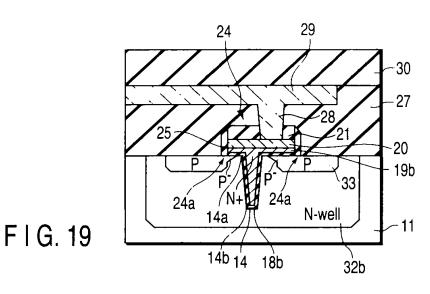


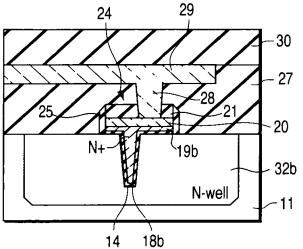

DURING FUSE BREAKDOWN:
POSITIVE VOLTAGE (+) IS APPLIED
TO GATE

DURING ACTUAL USE (JUDGEMENT): NEGATIVE VOLTAGE (-) IS APPLIED TO GATE


FIG. 20

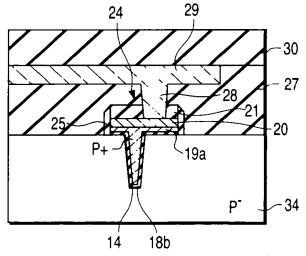


DURING FUSE BREAKDOWN:
NEGATIVE VOLTAGE (-) IS APPLIED
TO GATE


DURING ACTUAL USE (JUDGEMENT): POSITIVE VOLTAGE (+) IS APPLIED TO GATE


F I G. 21

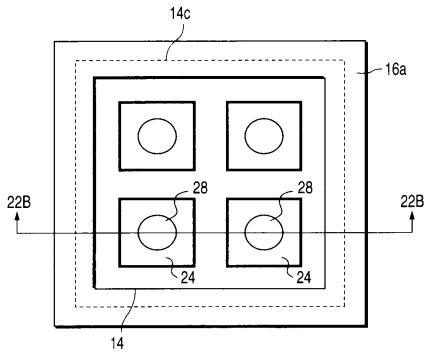


F I G. 22A

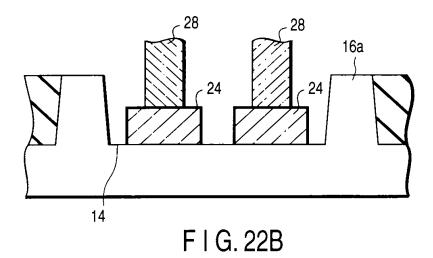


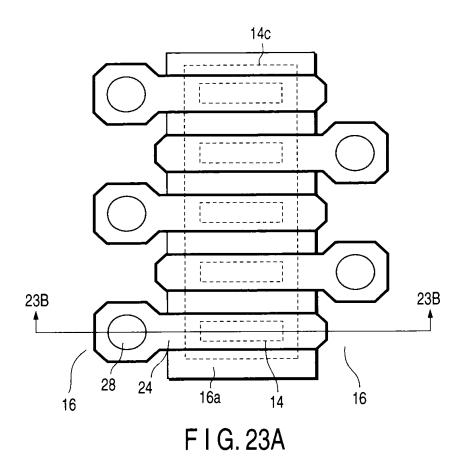

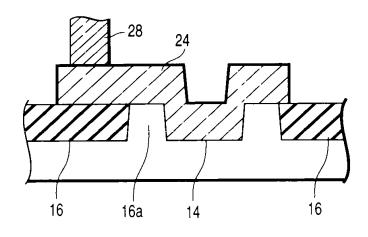


F I G. 23B

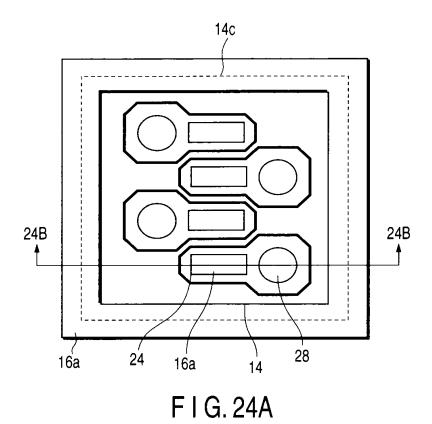


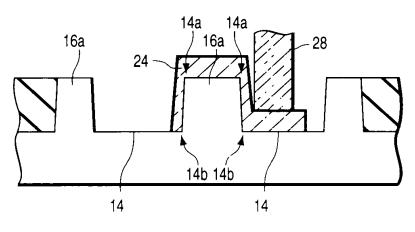

F I G. 24B

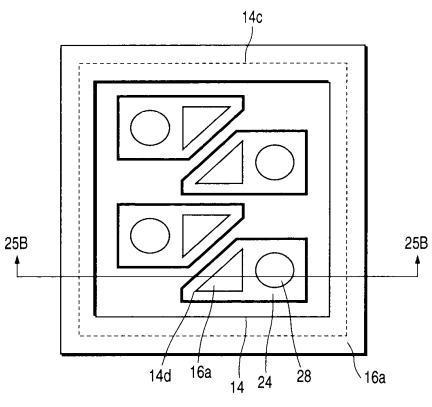

F I G. 25A

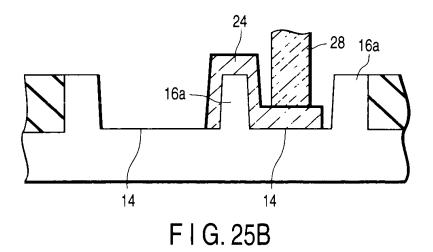





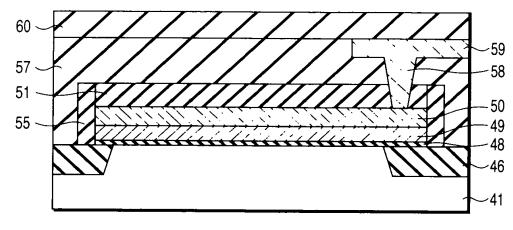



FIG. 26

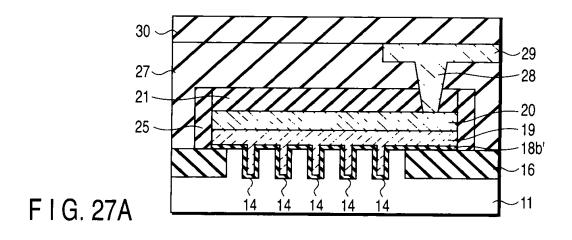


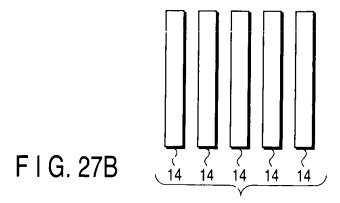

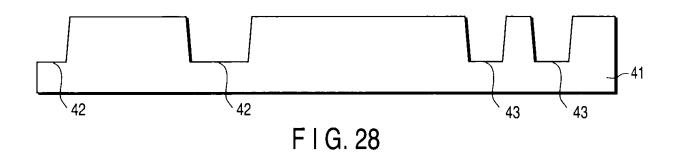

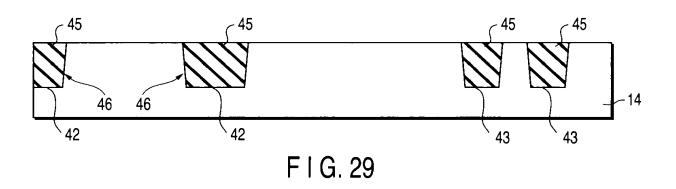

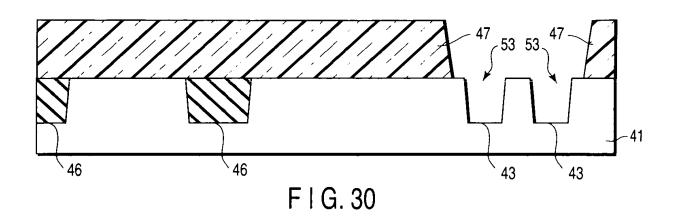

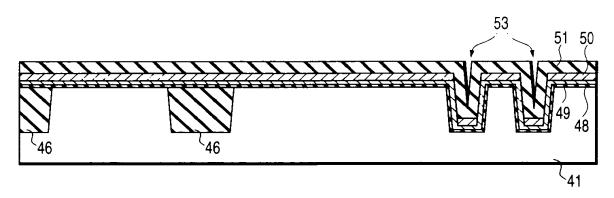

F I G. 31

